

# NIDECKER - SUPERMATIC®







## BINDING REPAIR INSTRUCTIONS

### HEELCUP REPLACEMENT

BP-S001-A/B - Heelcup+Pedal+Ladders Pre-mounted Set  
BP-S002-A - Carbon - Heelcup+Pedal+Ladders Pre-mounted Set



Scan this QR code to check out detailed set-up videos and register your Supermatic® bindings for warranty.

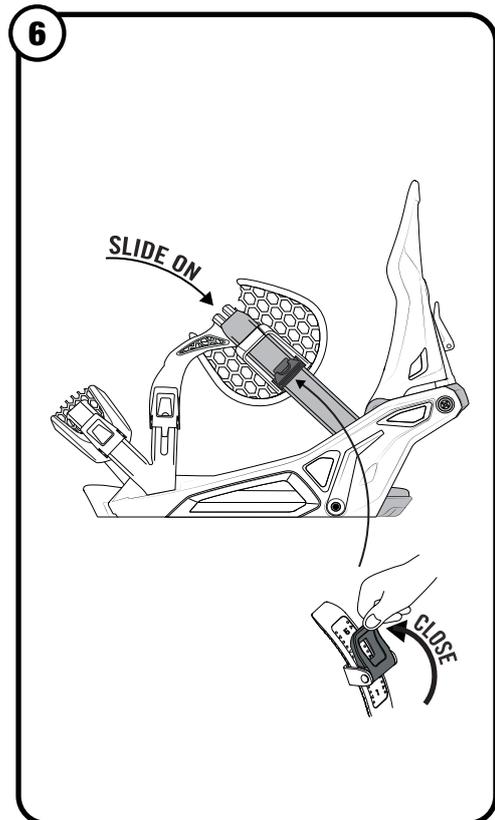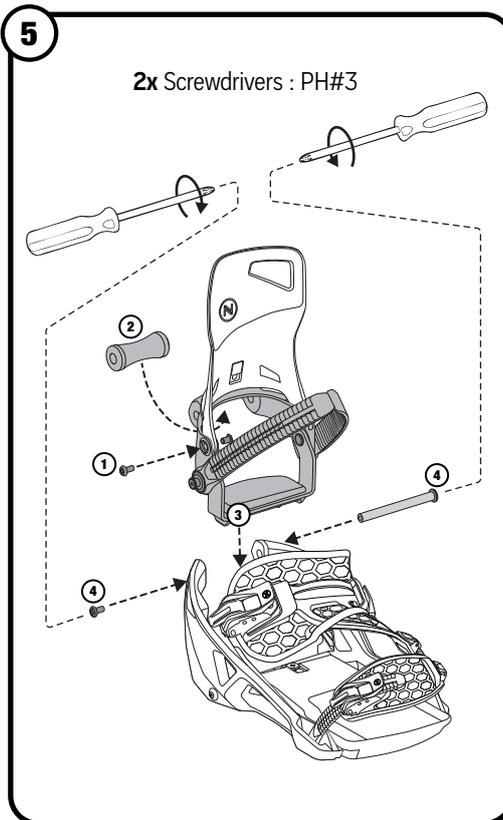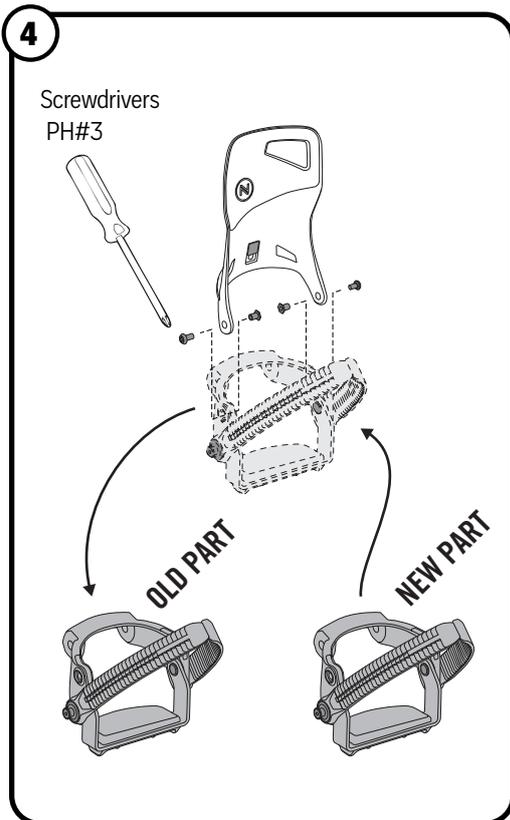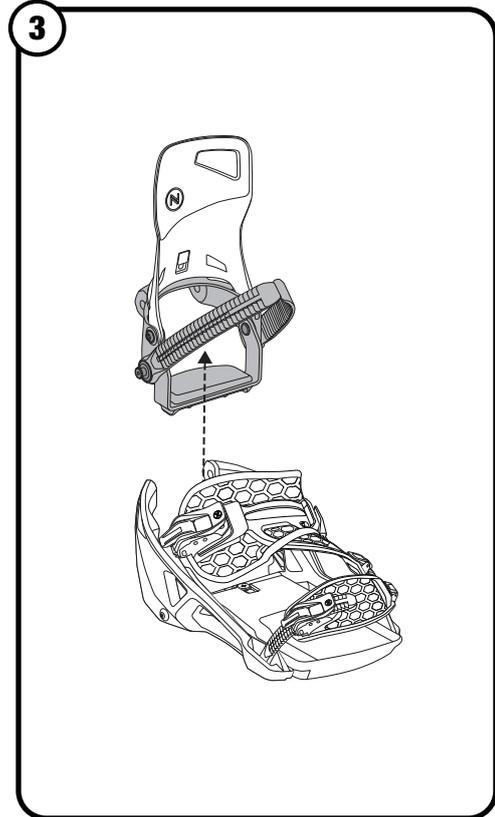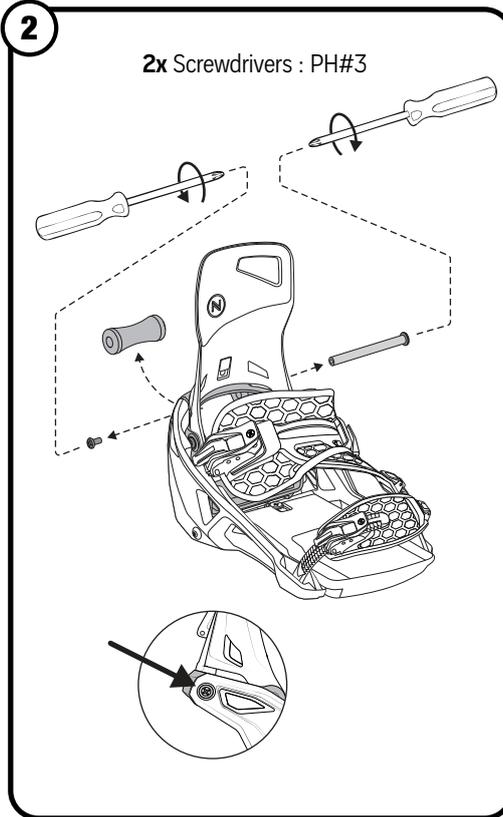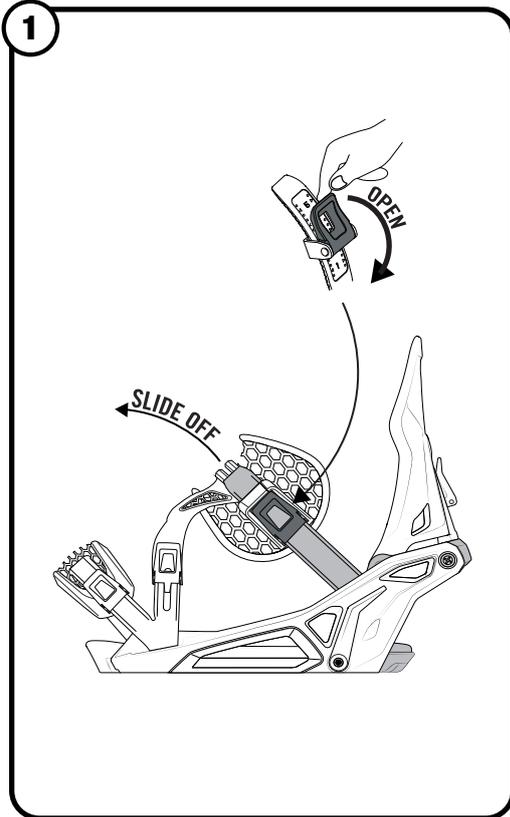

# NIDECKER - SUPERMATIC®




## BINDING REPAIR INSTRUCTIONS

### ROLLER REPLACEMENT

BP-S003-A - Roller+Axle Set






Scan this QR code to check out detailed set-up videos and register your Supermatic® bindings for warranty.

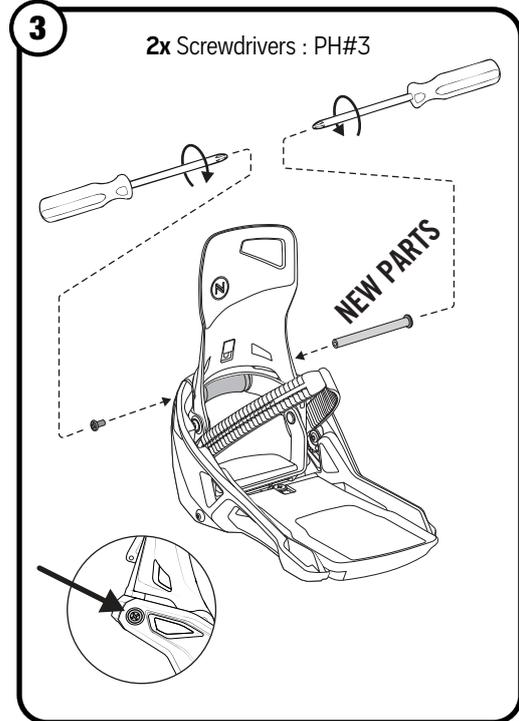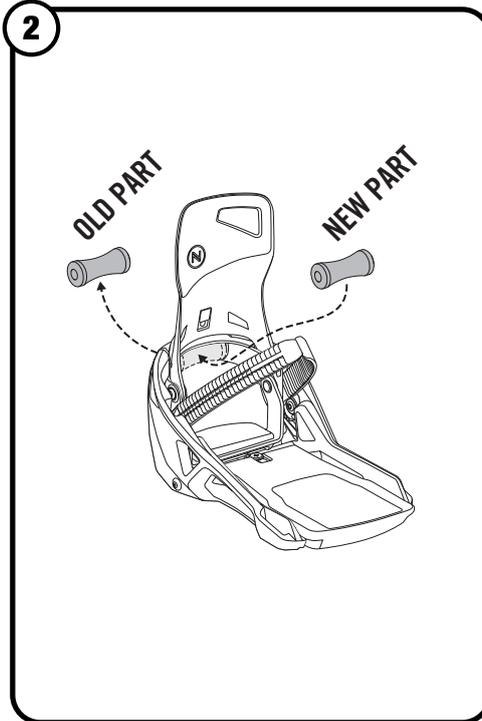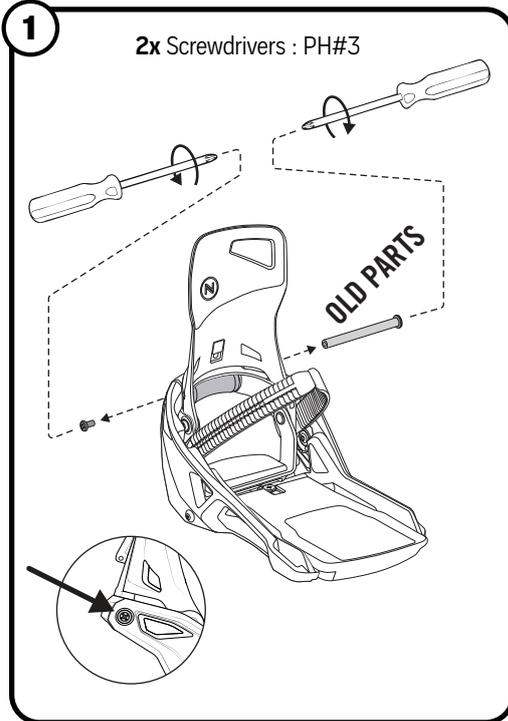

### FOOTBED REPLACEMENT

FB-S001-A - SnGrip Bankbed Set w/ screws, FB-S002-A - Carbon - SnGrip Bankbed Set w/ screws, FB-S003-A - LT - SnGrip Bankbed Set w/ screws

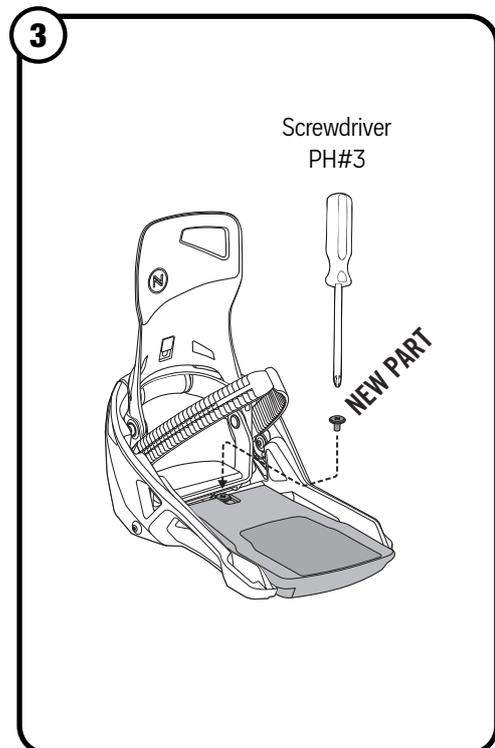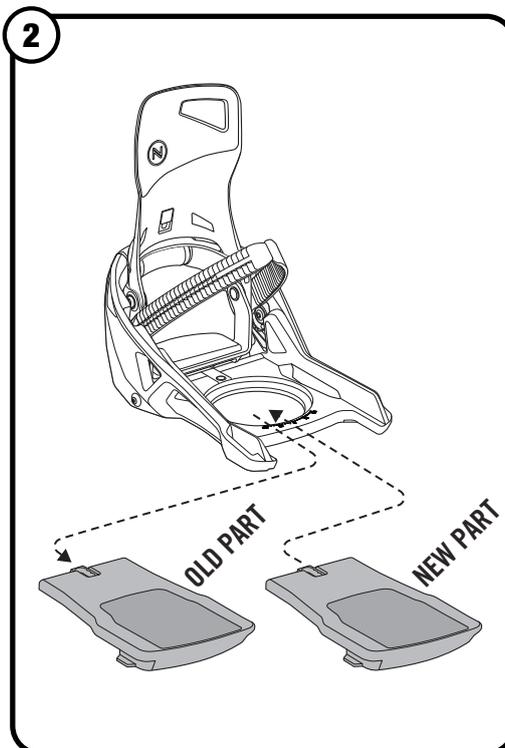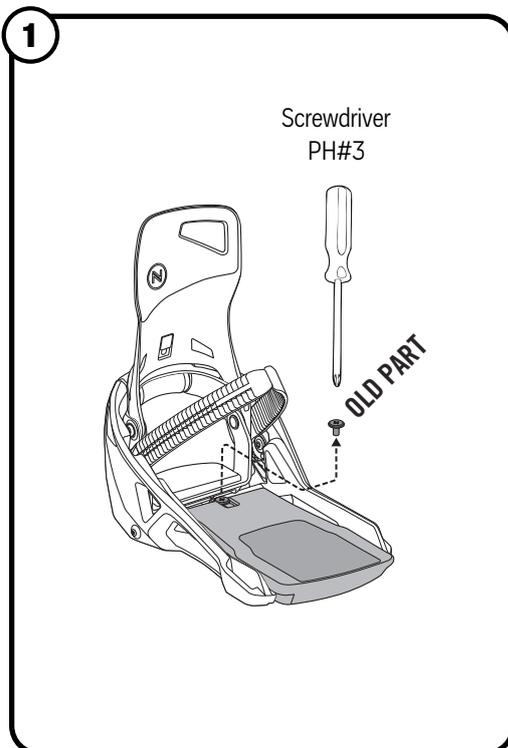



# NIDECKER - SUPERMATIC<sup>®</sup>




## BINDING REPAIR INSTRUCTIONS

### TOE STRAP REPLACEMENT

TS-S001-A - Hexo AuxTech ToeCap Set with QS-latch OR  
TS-N002-A - HexoToeCap 2.0 Set w/ QS-latch






Scan this QR code to check out detailed set-up videos and register your Supermatic® bindings for warranty.

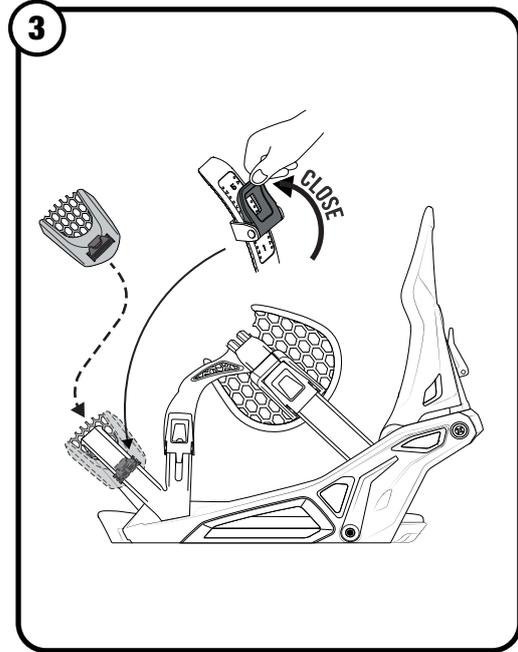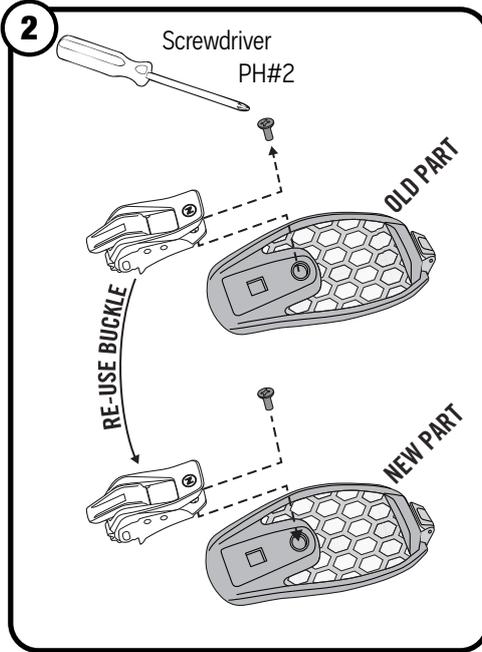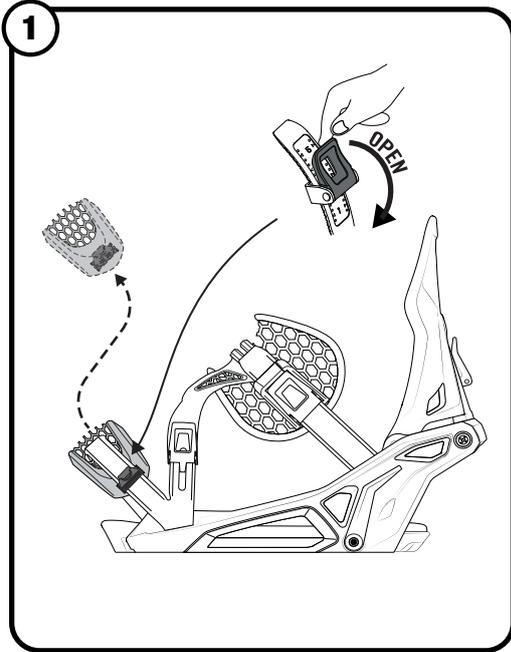

### DIAGONAL LADDER LEANBLOCK QUICKSET-LATCHES REPLACEMENT

HS-S002-A - DIAGONAL LADDER LEANBLOCK LEVER + AXIS + AXIS CIRCLIP without CORNER housing

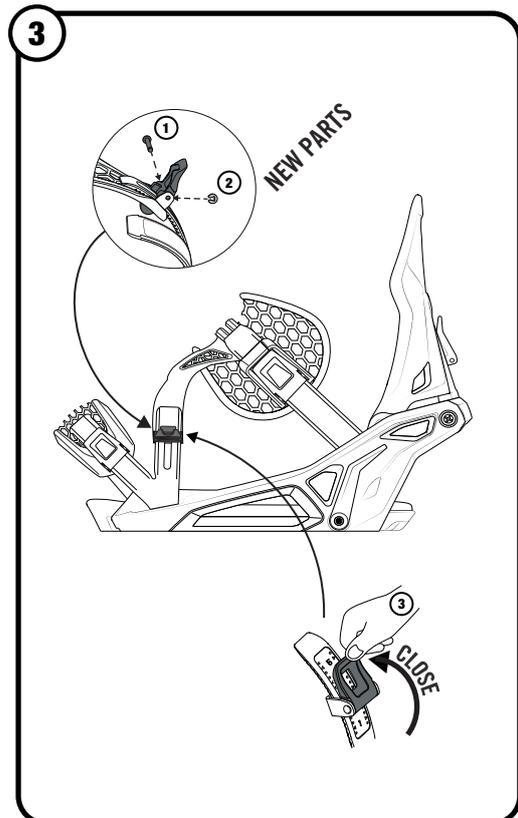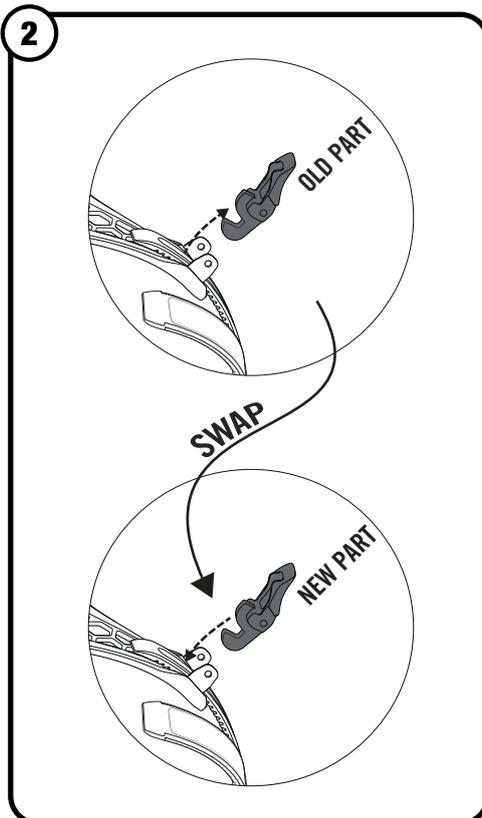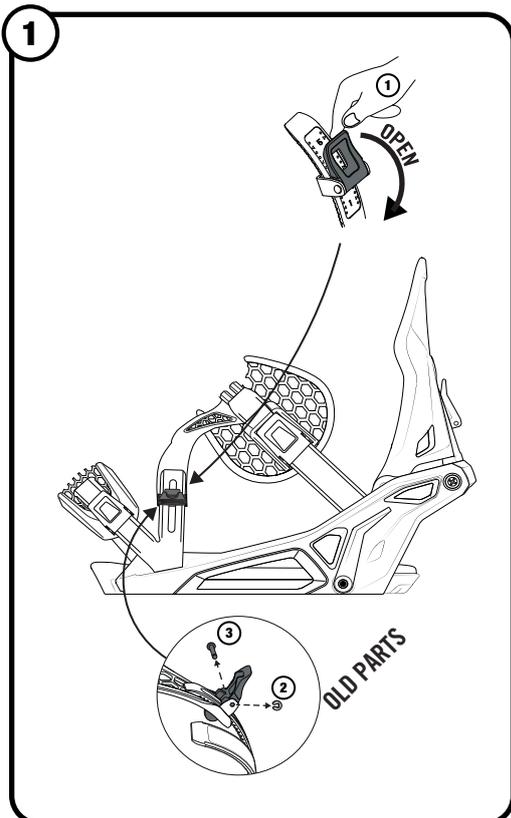

# NIDECKER - SUPERMATIC®




## BINDING REPAIR INSTRUCTIONS

### LSR 2.0 TOE-LADDER REPLACEMENT

TL-N003-A - LSR2.0 Straight Toe-Ladder with plug






Scan this QR code to check out detailed set-up videos and register your Supermatic® bindings for warranty.

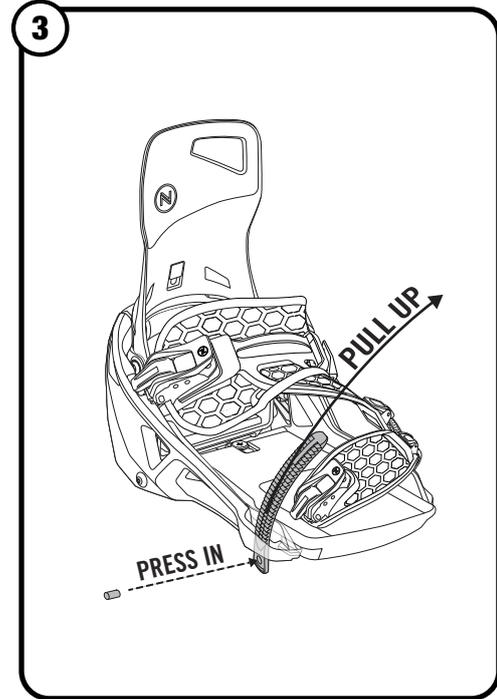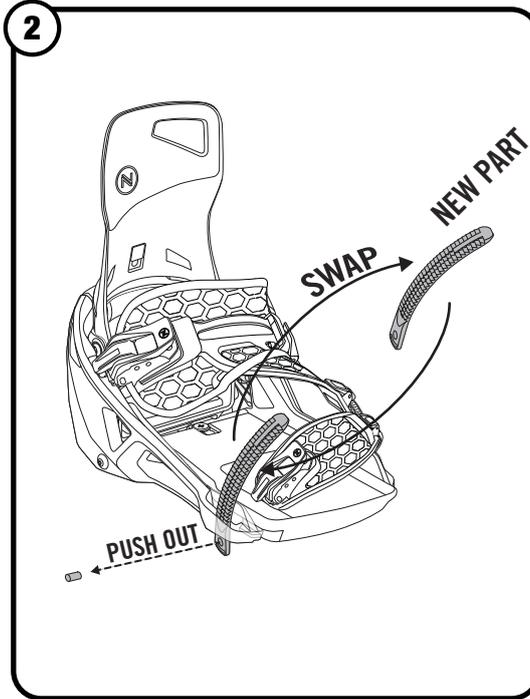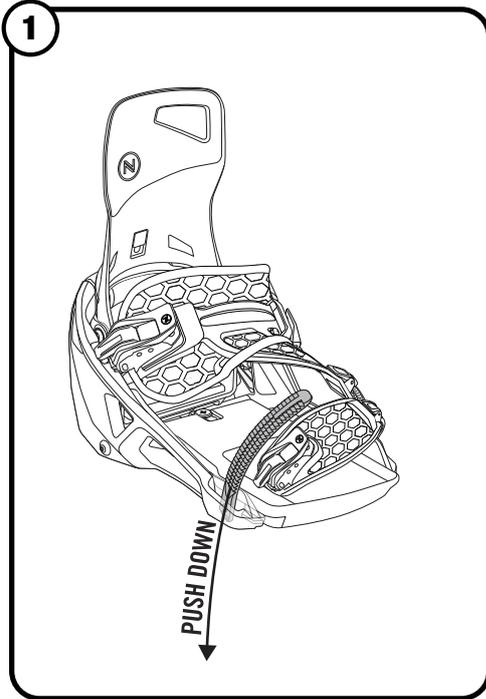

### RELEASE LEVER REPLACEMENT

VP-S001-A - Hook Release Lever with screws

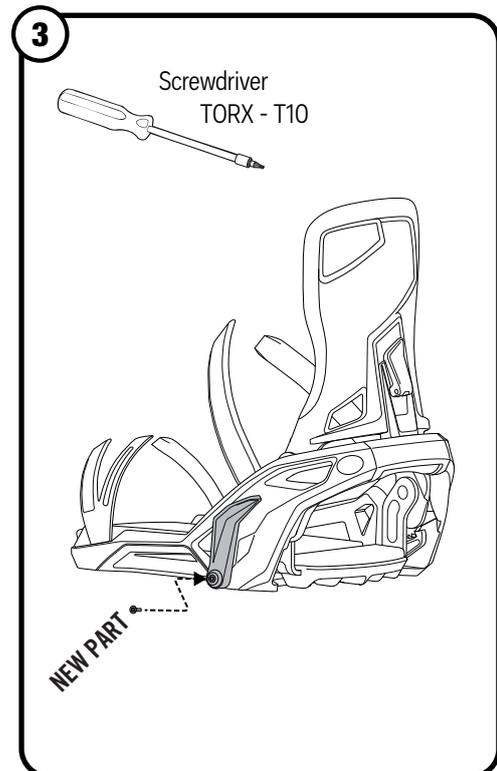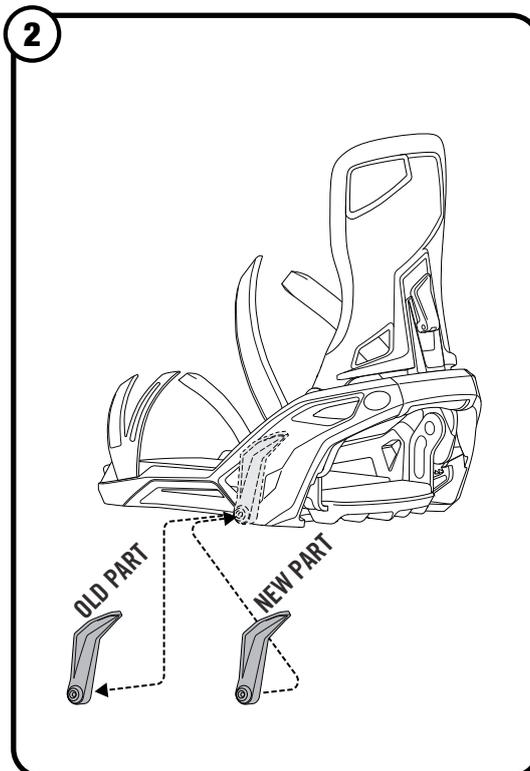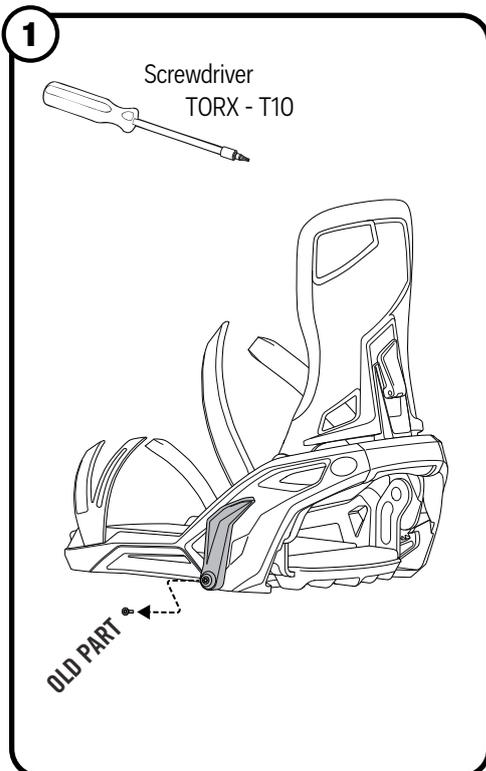

# NIDECKER - SUPERMATIC®







## BINDING REPAIR INSTRUCTIONS

### QUICK-SET Y-LADDER REPLACEMENT

YQ-S001-A - QuickSet Y-ladder with plug



Scan this QR code to check out detailed set-up videos and register your Supermatic® bindings for warranty.

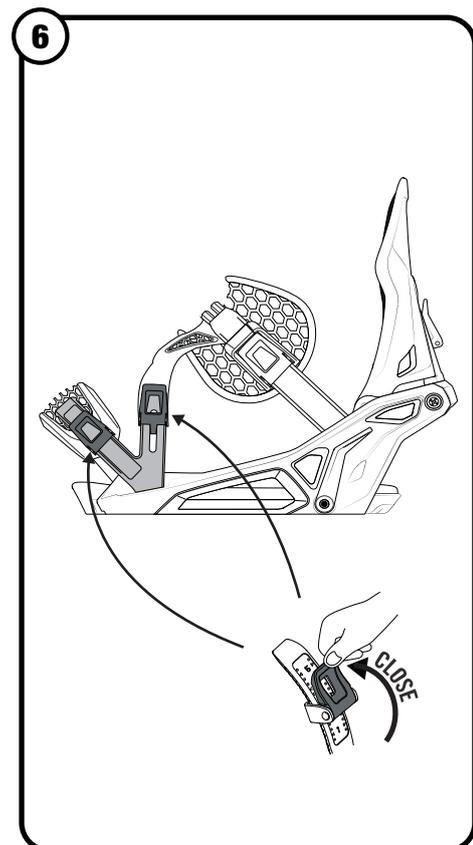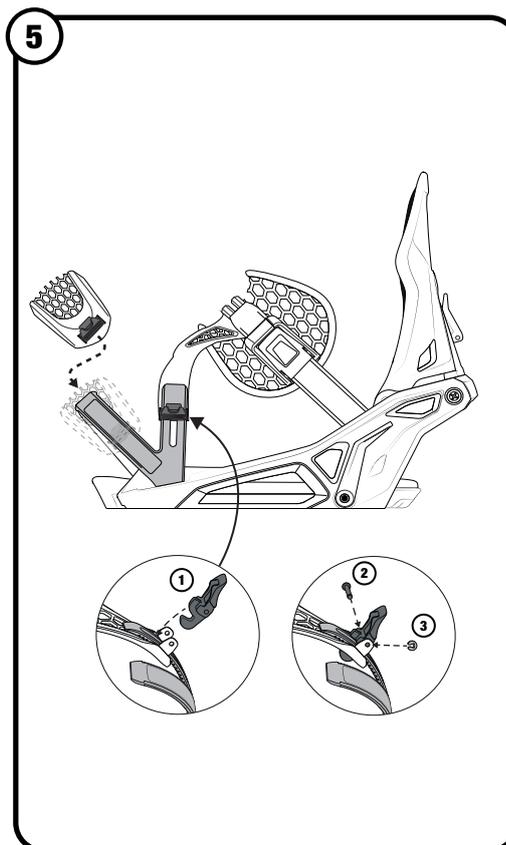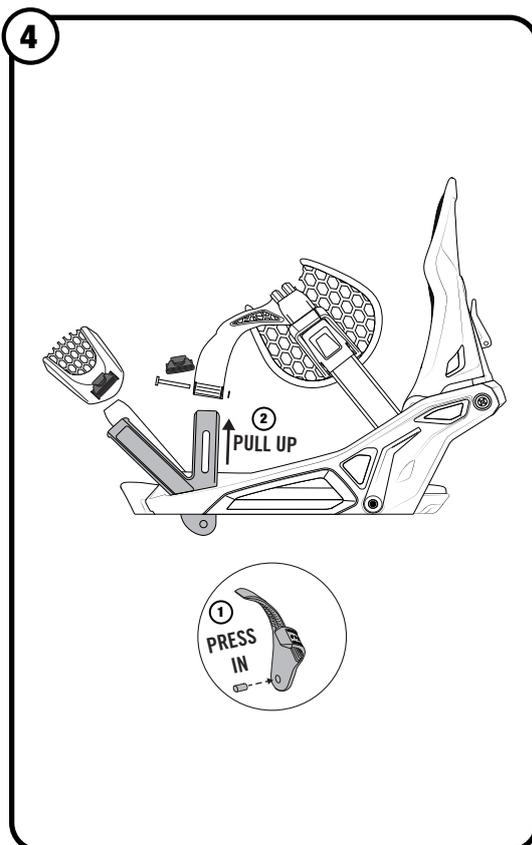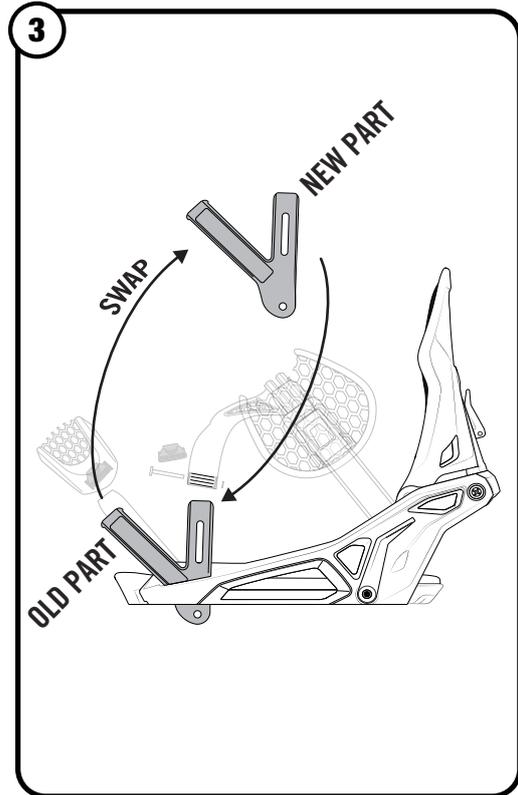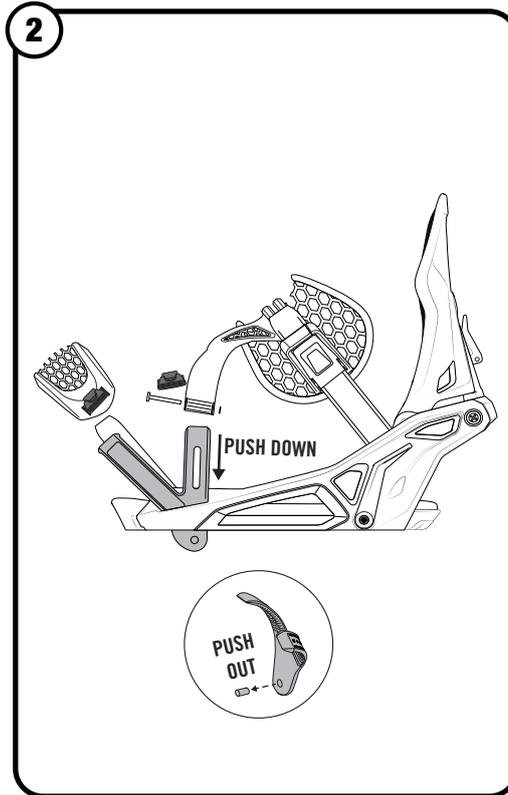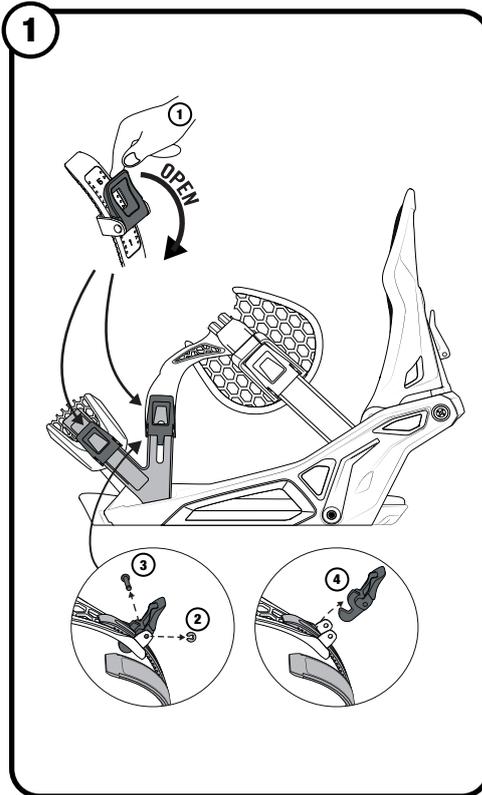

# NIDECKER - SUPERMATIC®

## BINDING REPAIR INSTRUCTIONS

### ANKLE LADDER REPLACEMENT

AL-N002-A - LSR2.0 Ankle-Pivot-Ladder  
AQ-N001-A - QuickSet Ankle-Pivot-ladder



Scan this QR code to check out detailed set-up videos and register your Supermatic® bindings for warranty.

